 


NEW

MODEL 284

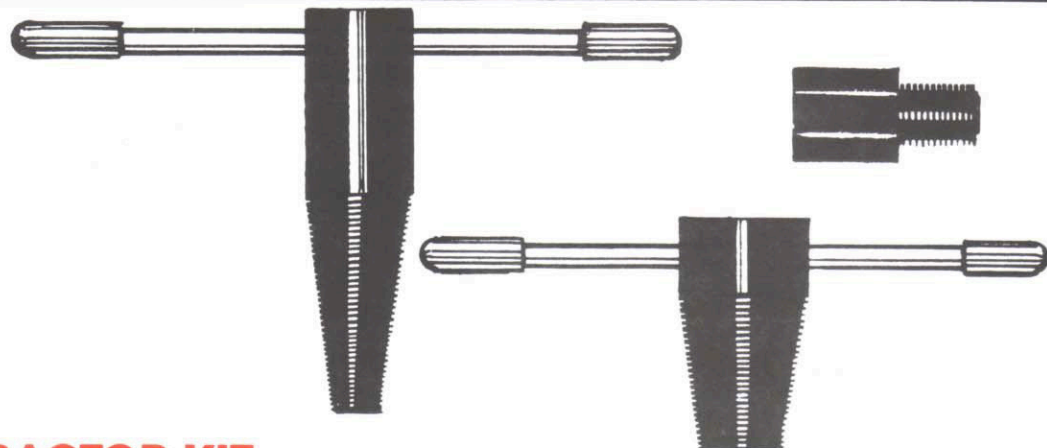


BUSHING EXTRACTOR KIT.

Easy to use:

Screw extractor into the bushing to be removed.

- Start and turn extractor into bushing as straight as possible.
- Turn extractor in by hand until very tight. (Do not use extension pipe for tightening.)
- If difficult to remove, be sure extractor is very tight and tap toward bushing to break loose. To remove, retighten extractor and repeat previous procedure.

(The 280-A illustrated in figure 1 accommodates bushings from .450" to 1" inside diameter)

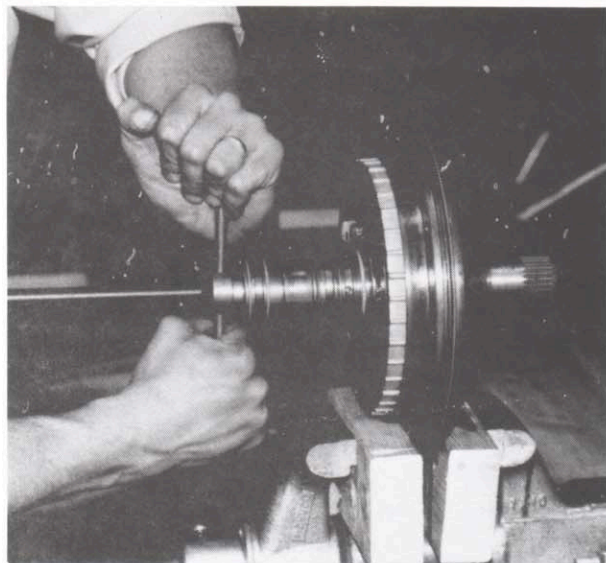


Screw slide hammer into extractor being used.

A few light taps will remove bushing.

- The 284 adaptor may be used to accommodate other slide hammer rods.
- When clamping parts, use wood blocks so surface finish is not damaged.

(The 280-B illustrated in figure 2 accommodates bushings from 1" to 1½" inside diameter)

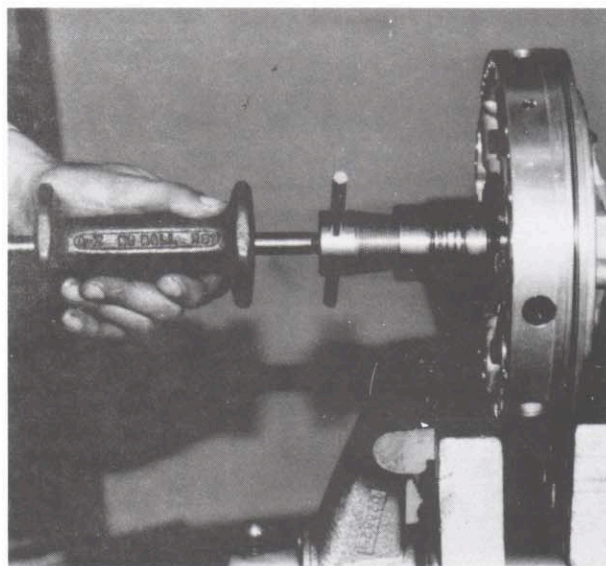

A to Z Tool, Inc.

144 W. Commercial St., Wood Dale, IL 60191
Phone: (630) 787-0478 Fax: (630) 787-0494



**Always wear
safety goggles**