



NEW E-Z ROLL-IN SEAL HOOKER & PILOT BEARING SEAL PULLER Model 280



- EASY "ROLL-IN" FEATURE
- THREE SEGMENT DESIGN THAT CONFORMS TO SHAPE OF SEAL FOR MAXIMUM SURFACE CONTACT
- REMOVES SEAL ASSEMBLY WITHOUT BREAKING IT APART
- COMES WITH UNIQUE HAMMERING HANDLE
- CAN BE USED ON ANY SLIDE HAMMER WITH 1/2 X 13 THREADS (ADAPTOR AVAILABLE FOR 1/2 x 20 or 3/8 Std)
- 2 YEAR WARRANTY ON MATERIALS AND WORKMANSHIP

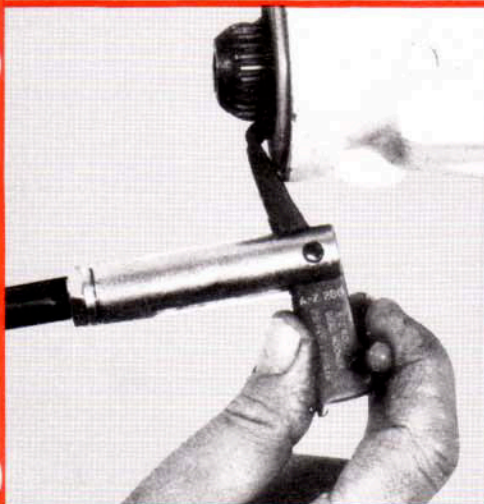


Unscrew seal hooker approximately two turns and roll-into seal as illustrated.

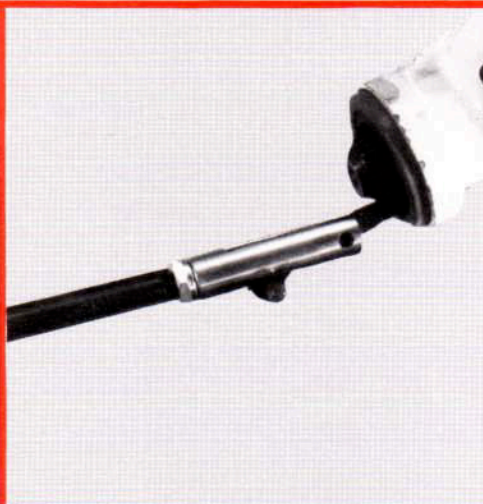


Screw in handle to lock hook segments in position.




Strike crossbar to remove seal. Seal hooker can also be used with standard slide hammer.
CAUTION: Wear protective eyewear!

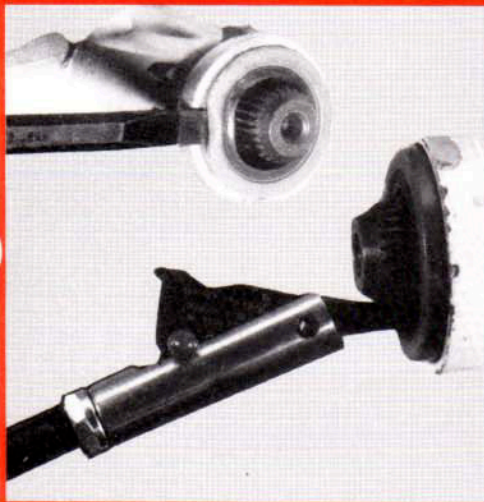

When removing coated seals tap side of seal to relieve pressure and "flip-flop" seal hooker for better pulling contact.

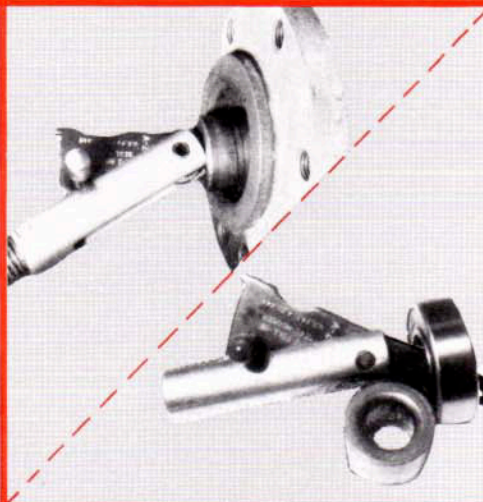

Seal puller in "flip-flop" position works on pilot bearings and small bearings.

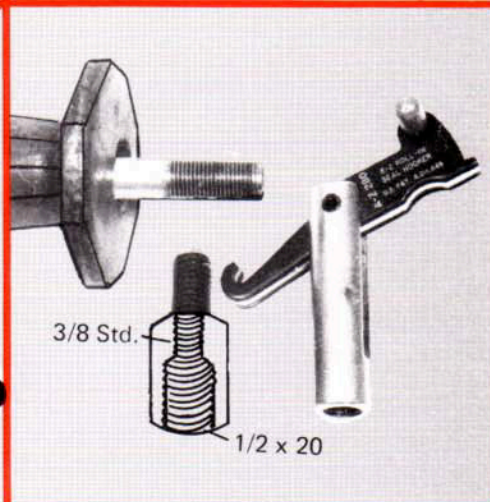

Special adaptor available to use seal hooker with slide hammer with 1/2 x 20 or 3/8 Std. threads.



A to Z Tool, Inc.

144 W. Commercial St., Wood Dale, IL 60191
Phone: (630) 787-0478 Fax: (630) 787-0494

ALSO AVAILABLE:

Model 281 Slide Hammer
(With no roll slide hammer)

Model 282 (1/2x13) Seal Hooker
Model 283 (1/2x20) Seal Hooker

Model 284 Adaptor (1/2 x 20 & 3/8 Std. Female - 1/2 x 13 Male)

